



Ultra Pure Systems- HydroCart

Hose Reel installation instructions

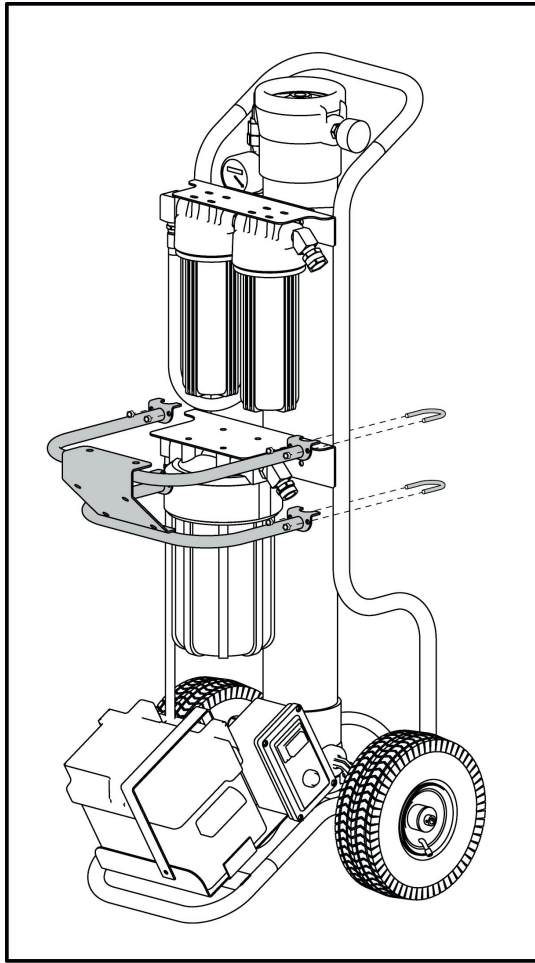

1. Attach on hose reel mounting bracket to cart frame with the (4) U-bolt assemblies.

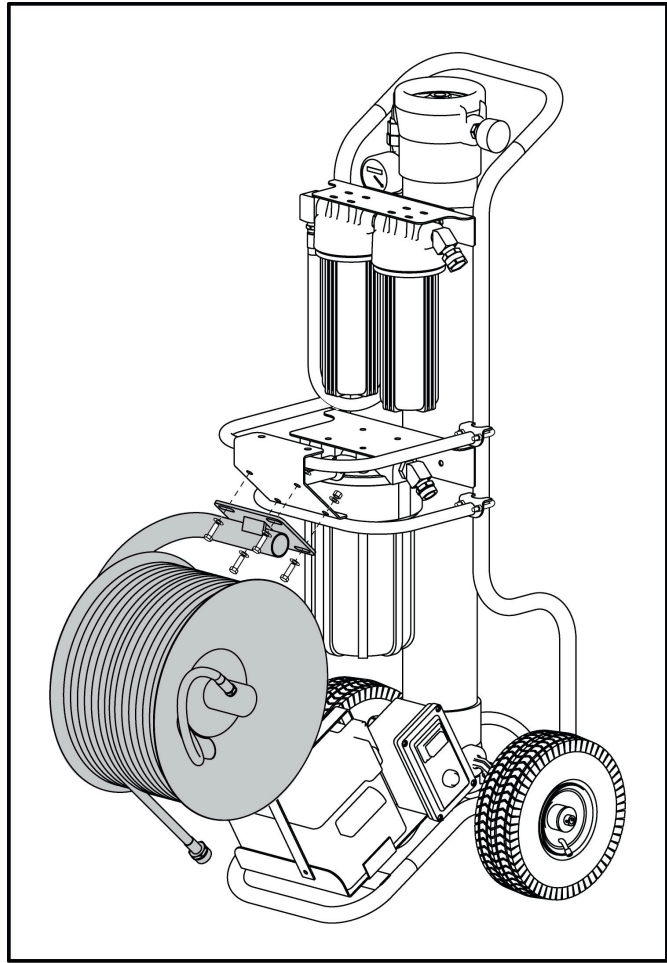

2. Attach hose reel assembly to hose reel bracket with (4) bolts, (8) flat washers and (4) Nylock nuts.



IPC Eagle

2955 Lone Oak Drive, #180, Eagan, MN 55121
www.ipceagle.com 1-800-486-2775 Customer Service